

## 17\_06 Elevations in XPL Plotting Light

### Question:

Elevations on the side of my xpl files coming up light when plotted.

### Answer:

A compiled MicroStation Basic program called "RD\_FixLightXplTexts.ba" has been place in the Roadway workspace to fix light text in the XPL file. To process all the models in a XPL file, Roadway Designers will need to execute the Microstation Command file "RD\_FixLightXplTexts.txt" in Batch Process mode. Batch Process mode can be called up via the Microstation menu, under "Utilities".



Make a copy of the original XPL file before running this program.

Location of:

RD\_FixLightXplTexts.ba -

C:\NCDOT\_V8\_WORKSPACE\Roadway\_STDS\Standards\macros

RD\_FixLightXplTexts.txt -

C:\NCDOT\_V8\_WORKSPACE\Roadway\_STDS\Standards\appl

### Before macro:



